

Sentech GigE Vision Camera

Technical Note:

The procedure to load the factory setting


Sensor Technology Co., Ltd

Introduction:


This technical note mentions how to load the factory setting on Sentech GigE camera. **This procedure support on GigE Standard model (STC-GE/GEC),GigE PoE model (STC-SC/SB**POE),GigE PoE High Speed Model (STC-SC/SB**POEHS) and PowerPlus Model.**

1 The Procedure for Loading Factory Default


- 1) Connect the FPGA uploading GigE Vision camera, and then power-on the camera.
- 2) Setup the camera with StGigE Player after rebooting the camera.
- 3) Connect the camera by selecting the “Select/Connect” button.

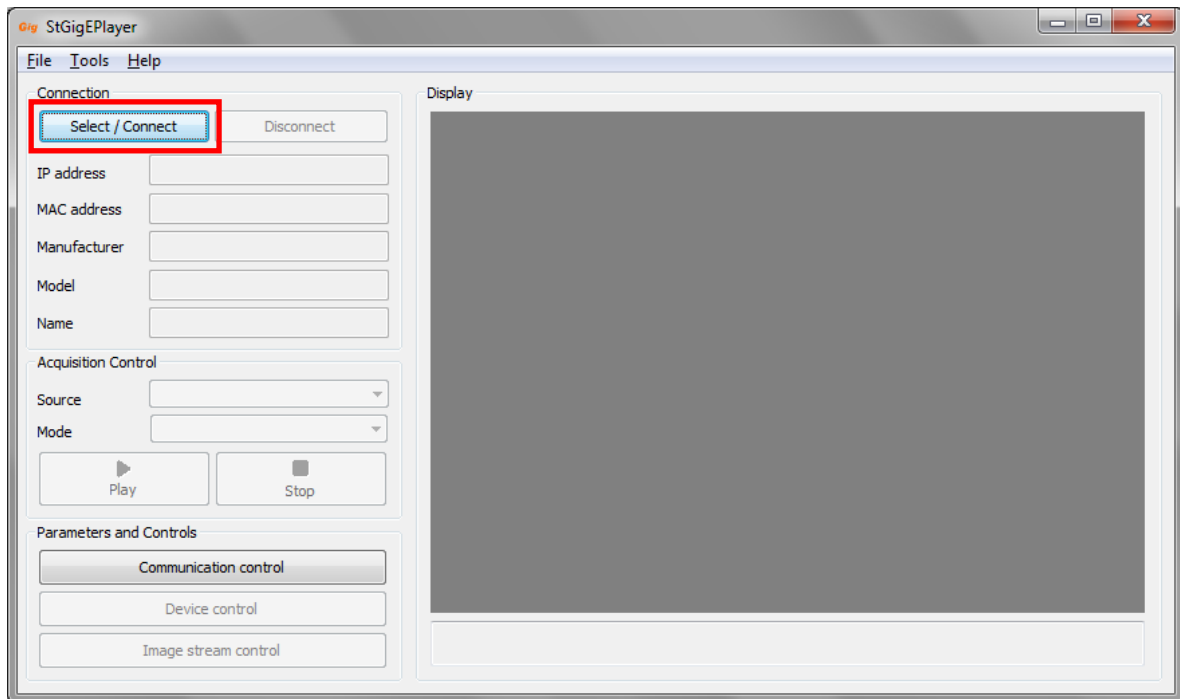

- 4) Select “GigE Device control” after connecting the camera.

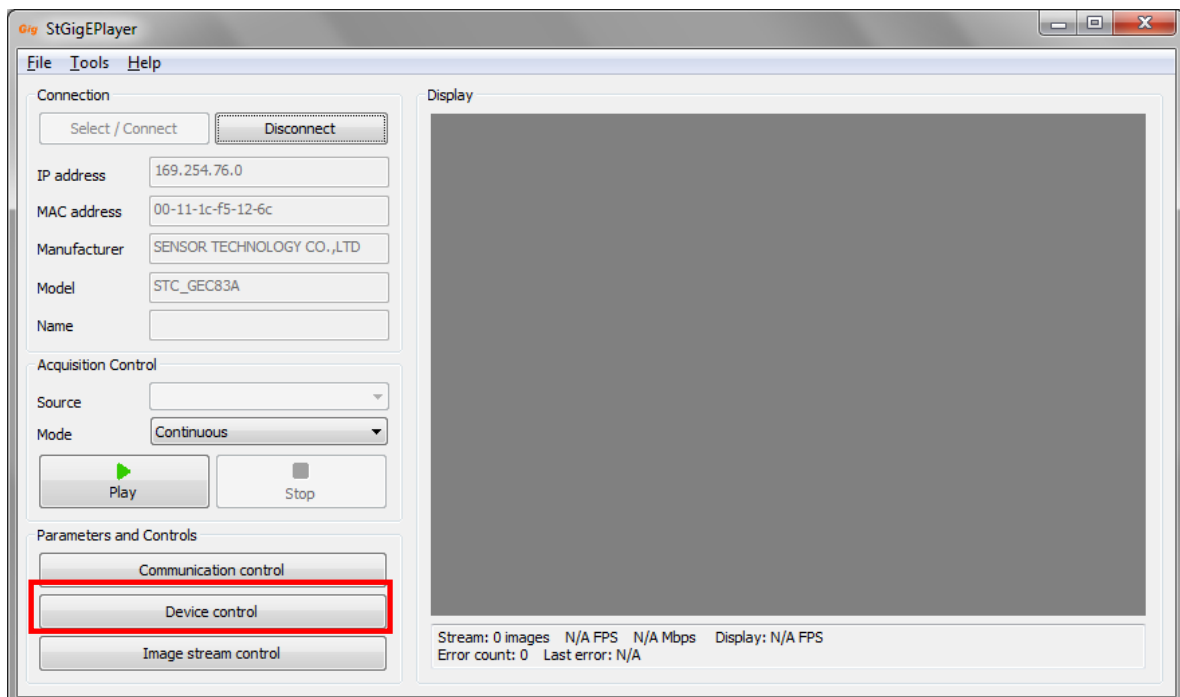


5) Change the setting with “GigE Device control” window.

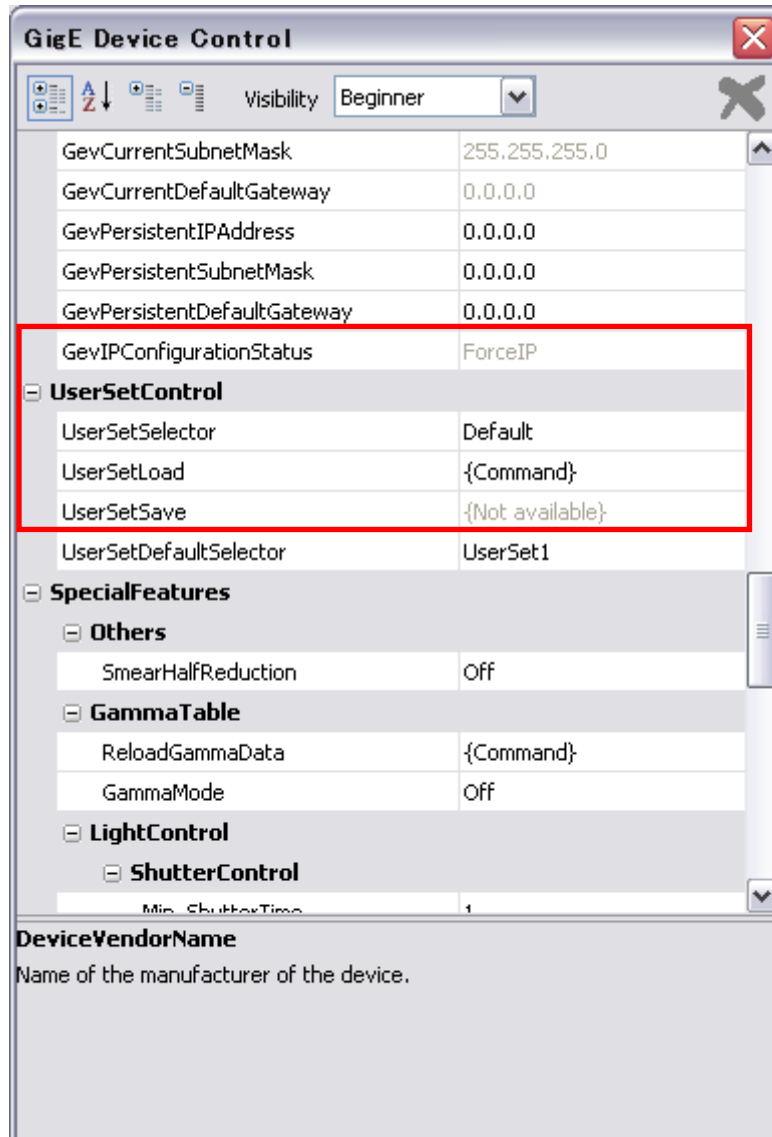


A) Make sure “UserSetSelector” is on “Default”.Select. Then select the “UserSetLoad” and click the “UserSetLoad” button on the right side of this box.



 B) Select “UserSet1” on UserSetSelector.



 
C) Click ` UserSetSave ` button on “UserSetSave”.




D) if “UserSetDefaultSelector” is not “UserSet1”. Please change to “UserSet1”.



- A) Click below area at “GigE Device Control” window before close “GigE Device Control” window. The camera may not work correctly if close “GigE Device Control” without click.

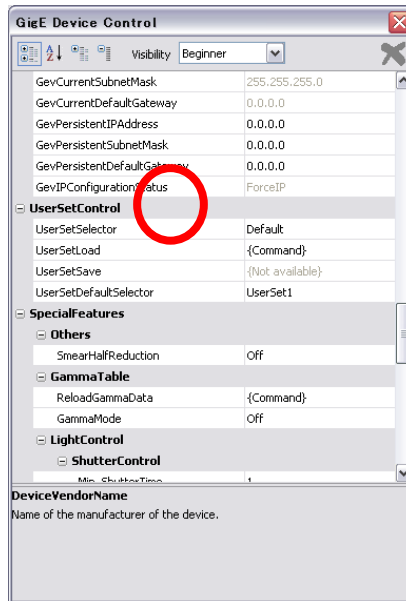

- 6) Changed statuses are shown in the window below. . And close this window. Factory setting have already been loaded.

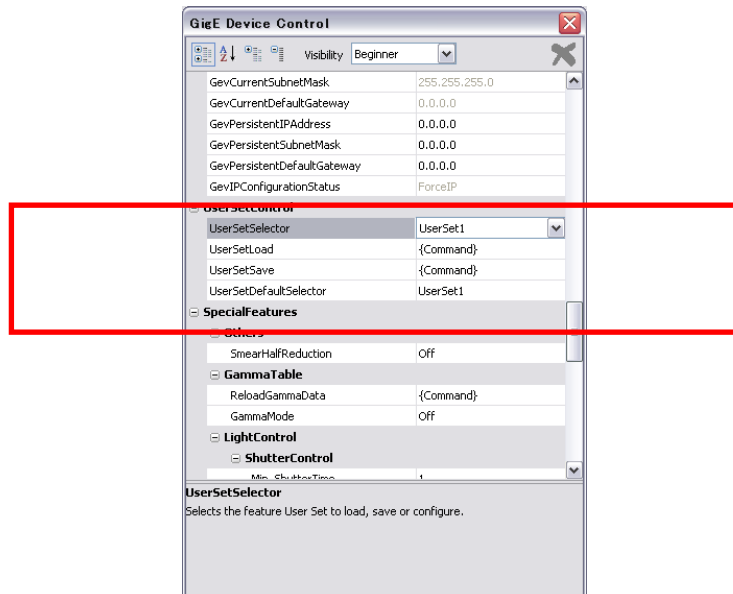

Revision History

Rev	Date	Changes	Note
1.00	2013/01/25	New document	

Sensor Technology Co., Ltd

7F, Harada center building
9-17, Naka cho 4 chome
Atsugi-city, Kanagawa
243-0018 Japan
TEL 81-46-295-7061 FAX 81-46-295-7066
URL <http://www.sentech.co.jp/>